




Panasonic Lumix DMC-ZS25 Lens Replacement

How to replace the entire camera lens.

Written By: Abbas Khan

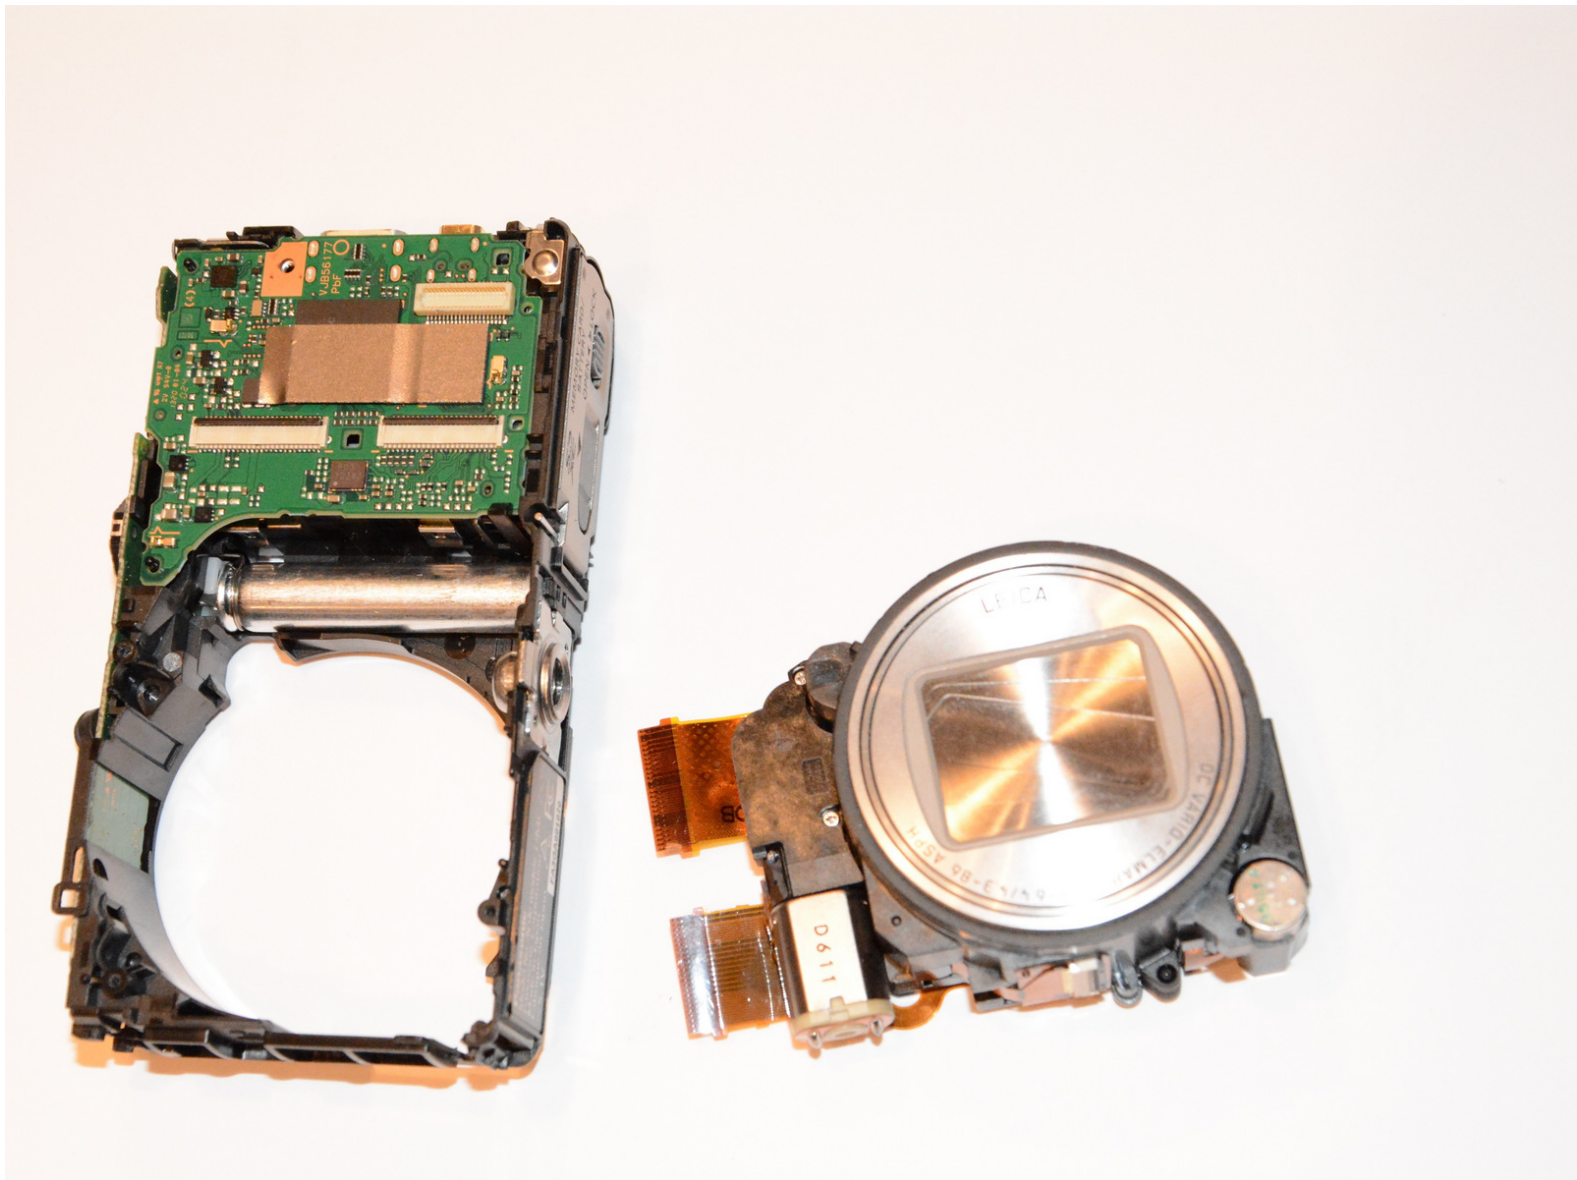

INTRODUCTION

This guide is going to help anyone replace his or her camera's lens. It will guide you to disassemble your camera in order to replace the lens.



TOOLS:

- [Phillips #00 Screwdriver](#) (1)
 - [Spudger](#) (1)
 - [iFixit Opening Tools](#) (1)
-

Step 1 — Camera lens




- Open the four 3.40 mm screws from the right and left sides of your Panasonic Lumix Camera.
- Remove the two 2.60 mm screws located next to the battery.

Step 2




- Use the plastic opening tool to open the outer cover of your device.
 - The easiest place to open your device is from the HDMI port.
- ⚠ Gently, open it to avoid breaking the cover.

Step 3

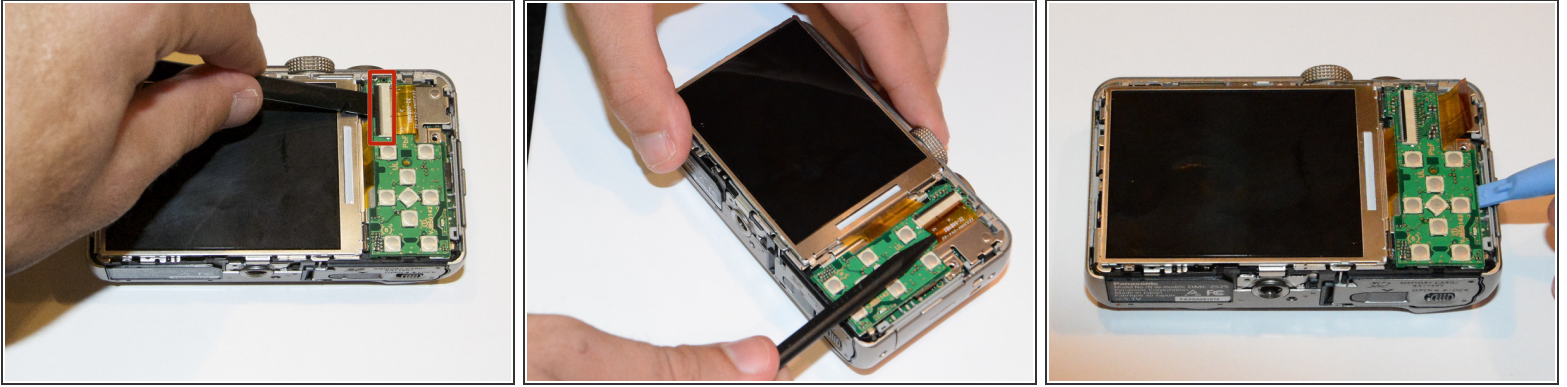



- Use a spudger to detach the ribbon cable.
- ⚠ Be careful when you use the spudger because you do not want to break the the ribbon.
- After releasing the screen cable, use the plastic opening tool to lift the button board.
- Once you hear a "click" sound, you have successfully opened the buttons board.

Step 4

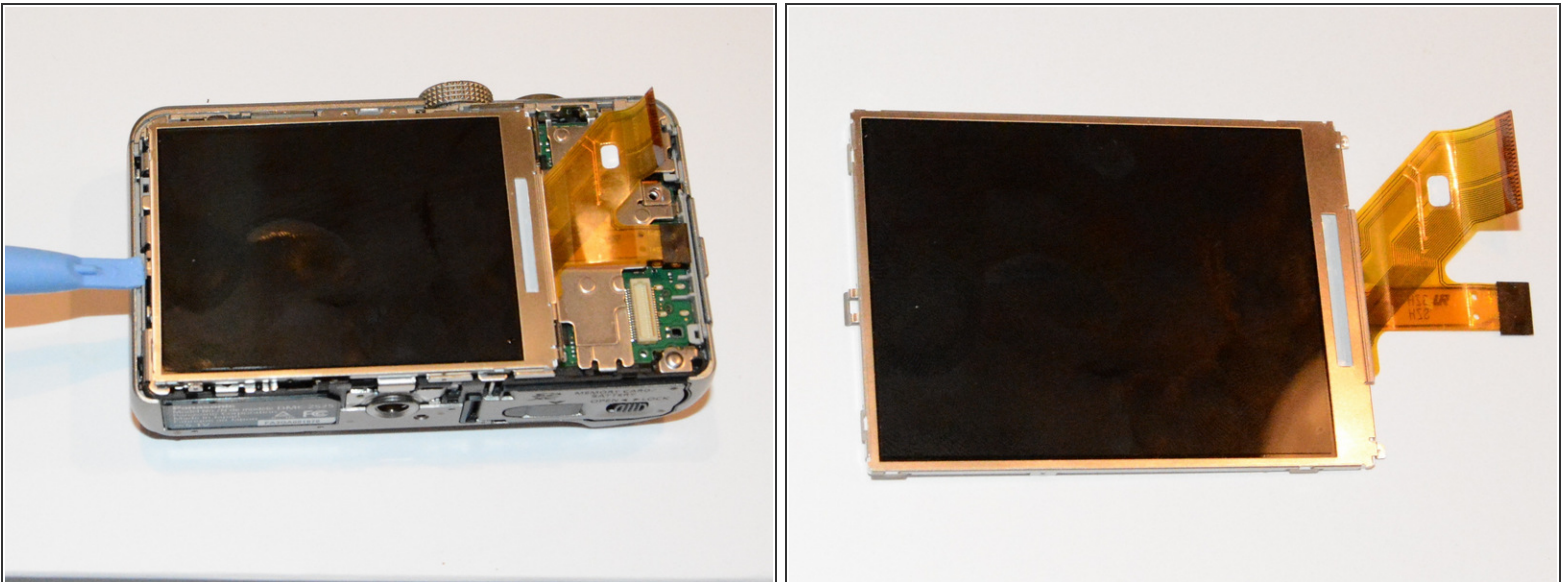



- Remove the screen from the position shown using the plastic opening tool.
- After your hear a "click" sound, you have successfully opened the screen

Step 5

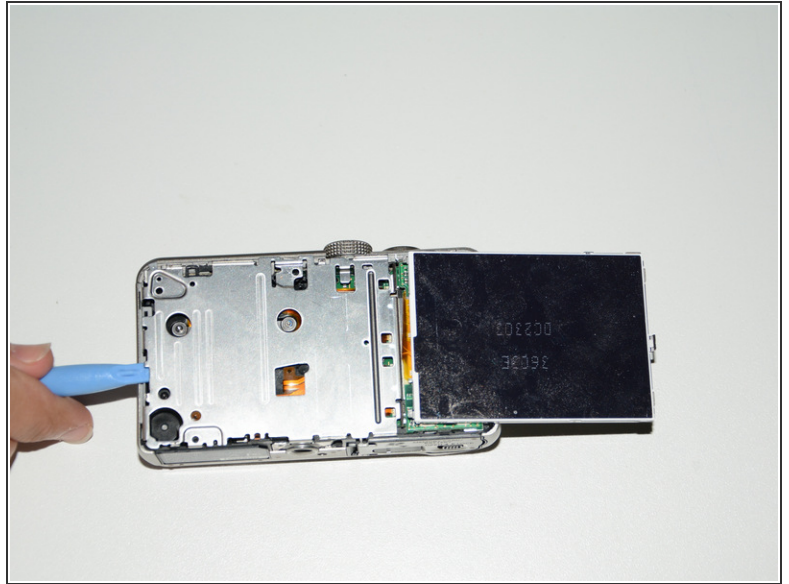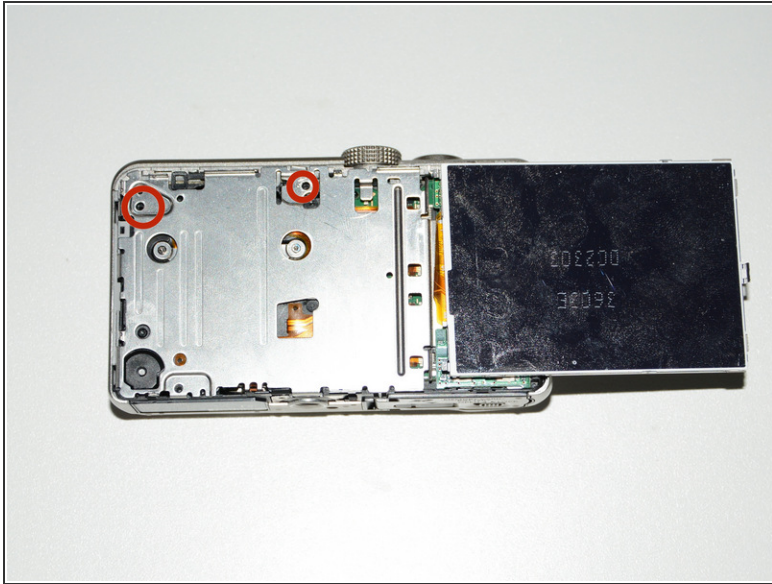

- Open the two 4.20 mm screws to remove the inner cover located beneath the screen.
- Once you opened the screws, use the plastic opening tool to remove the inner cover as shown.

Step 6

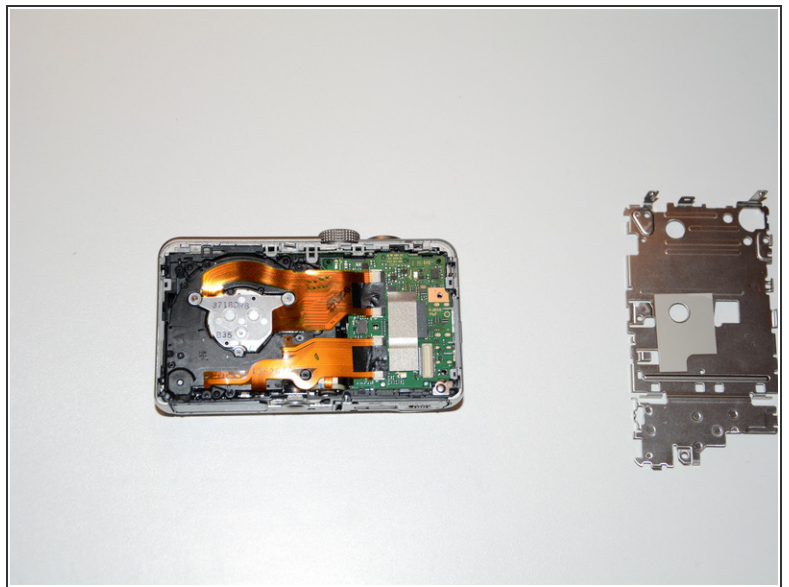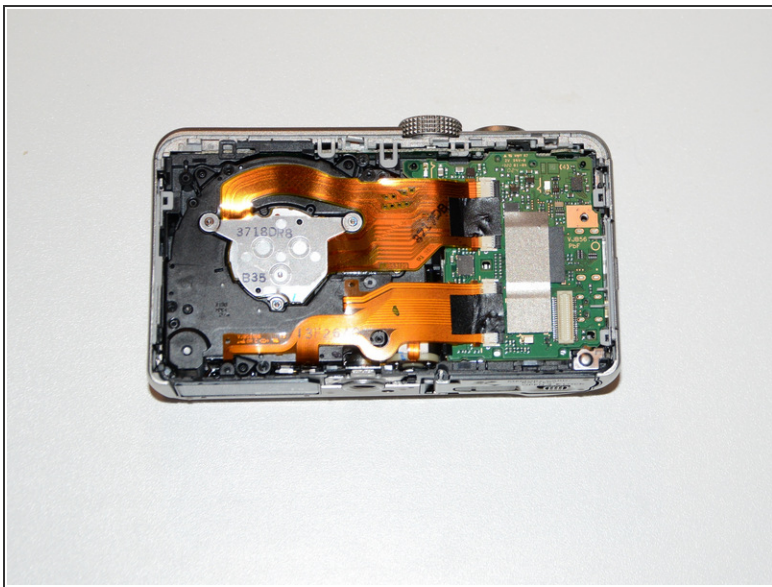

- Separate the device into two pieces as shown.


Step 7



- Remove the side cover using a plastic opening tool. After removing the side covers, you will be able to take away the front cover with your hands.

 Be careful when you pull the front cover to avoid breaking the device.

Step 8

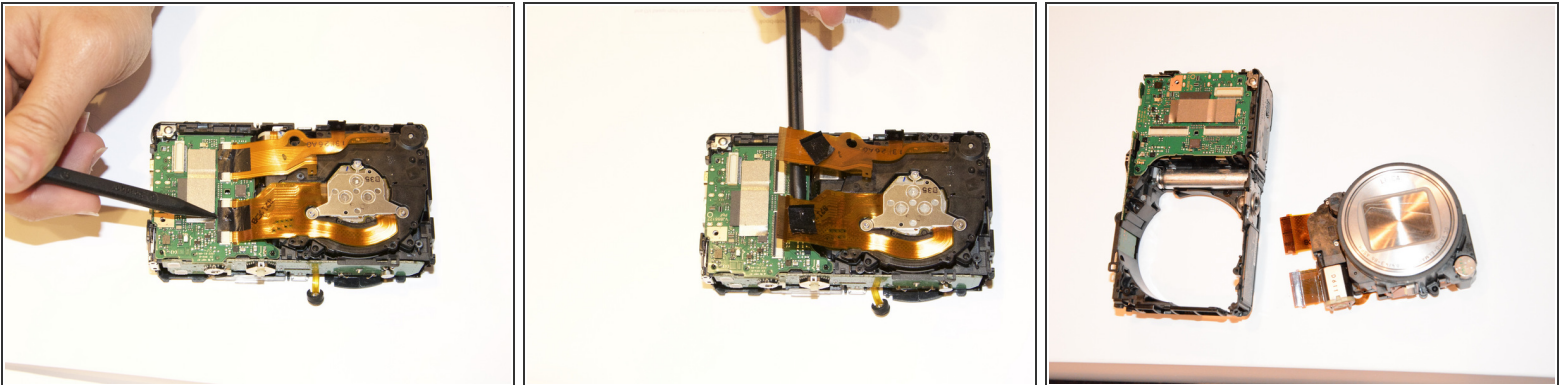

- Use the spudger to unlock the screen cables from the circuit board. Carefully, lift up the black clip up to release the cables.
- After releasing the cables, use your hand to remove the lens.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-07-29 06:31:03 PM.